




---

## INSTALLATION AND MAINTENANCE GUIDE




---

# PLENUM


Installation Diagram

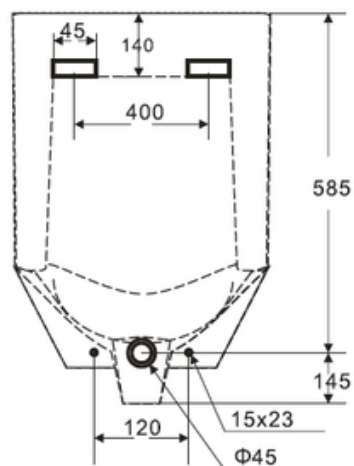

Technical Drawing

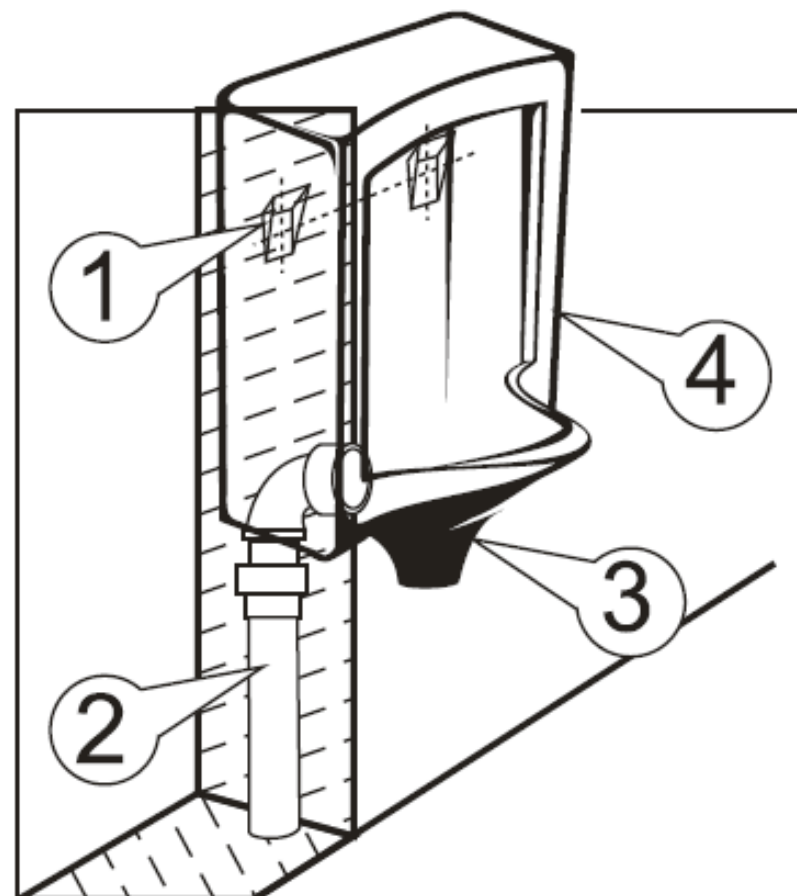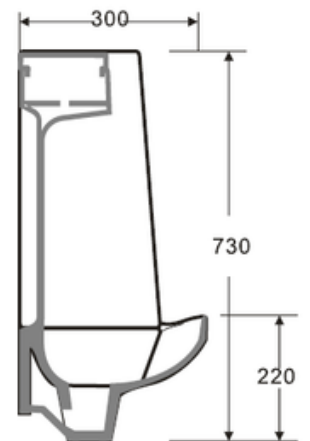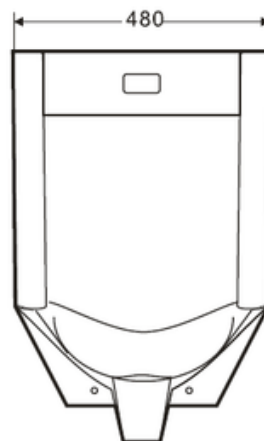


1. the hook of installation
2. outflow pipe of hidden inside the wall
3. S-trap outflow pipe
4. Urinal

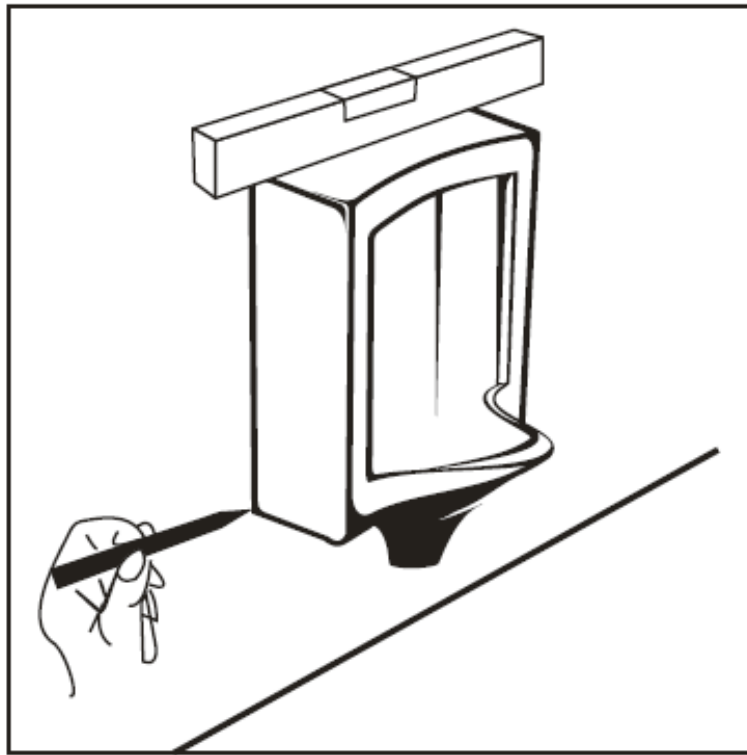


1. Position the urinal at the installation location. Use a spirit level to ensure the urinal is properly aligned horizontally. The installation height of the back-to-wall urinal should be determined according to the position of the outlet pipe. Make sure the drain outlet is correctly aligned and connected with the urinal outflow pipe.


2. Mark the installation points through the urinal fixing holes using a grease pencil. After marking, carefully remove the urinal from the installation position.

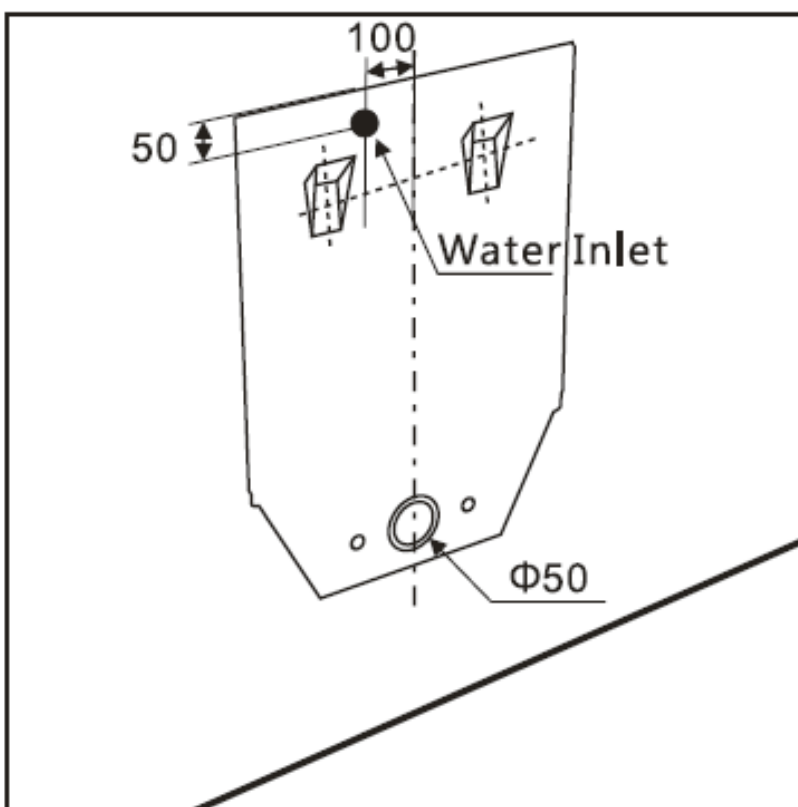

3. Measure and identify the fixing hole positions for the urinal installation according to the mounting dimensions. Mark the drilling points with a grease pencil, then use an impact drill to make holes at the marked positions.

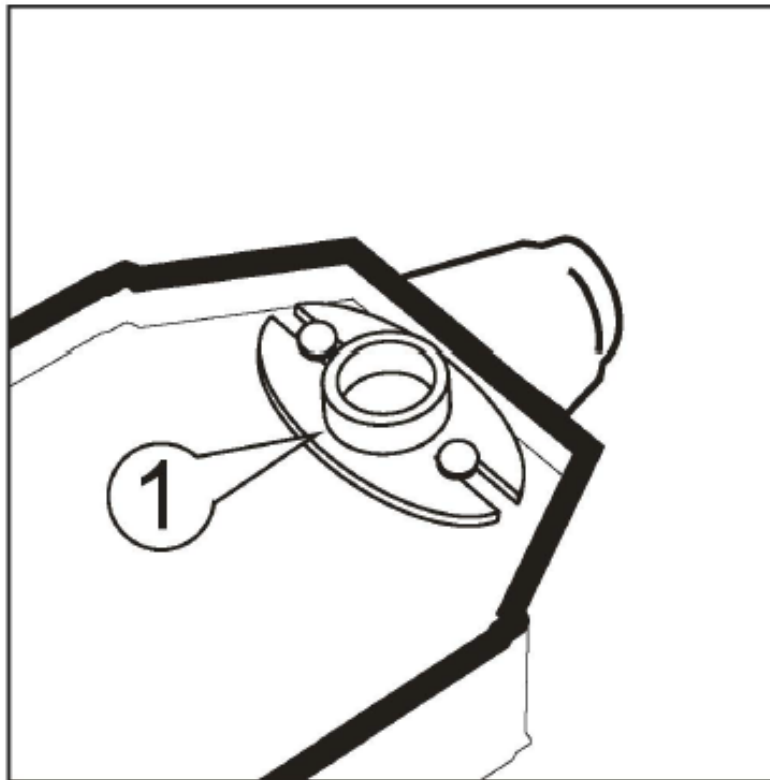


Secure the flange to the back-to-wall urinal.

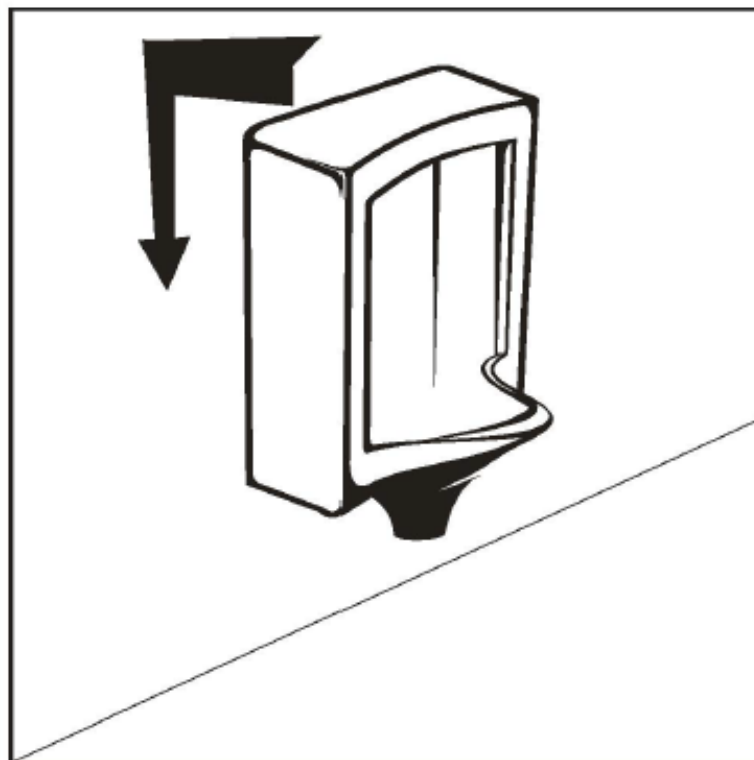


Mount the urinal onto the wall and simultaneously complete the connection to the drain outlet pipe.

Connect the water inlet fittings, then check all connections carefully to ensure they are completely watertight and leak-free.

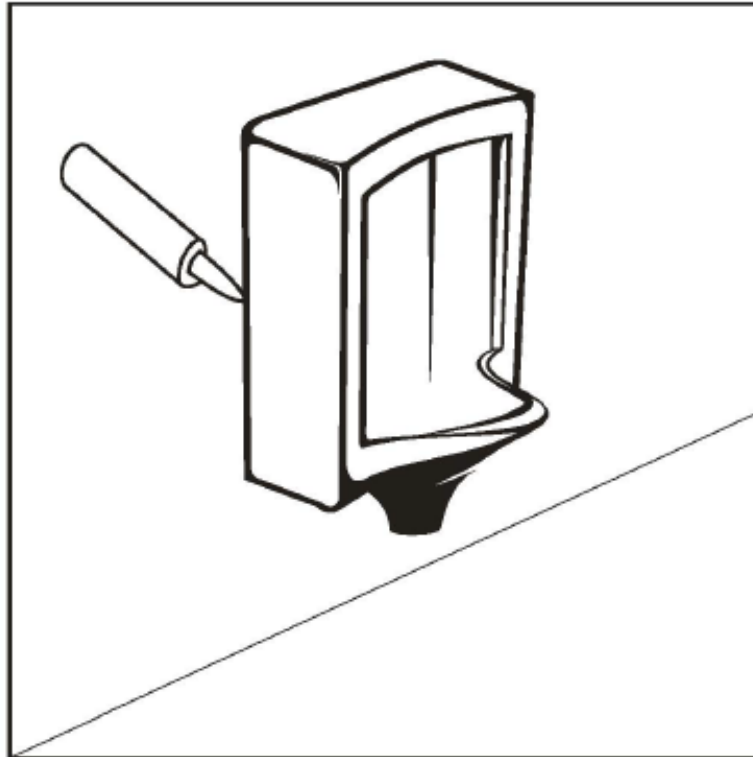

Apply anti-fungal silicone around the edges of the urinal where it meets the wall, ensuring all connections are properly sealed and secured.

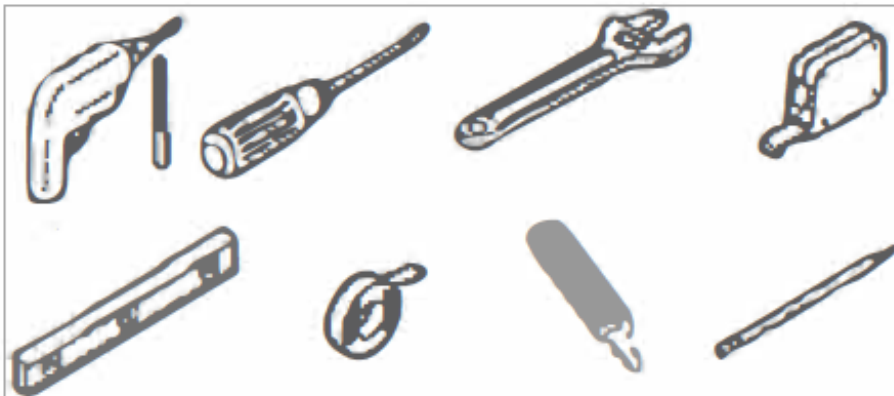

- Hammer drill
- Screwdriver
- Adjustable spanner
- Measuring tape
- Spirit level
- Teflon tape
- Silicone
- Marking pen

## DON'T

1. Over-tightening fixing bolts may cause breakage or chipping of the sanitary ware.
2. Do not use abrasive cleaners or solvents to clean the toilet bowl.



END OF DOCUMENT